

CAUTION

Does your pistol have a safety lever?

In certain circumstances it is possible to inadvertently engage or disengage the safety on pistols equipped with external safeties. One way this can happen is when the user applies pressure to the safety lever, through the holster, while fastening the thumb break on holsters so equipped. Another way this might happen is when the user is tucking an inside the pants type holster into his/her waistband. It is also possible to catch the safety lever on the edge of the holster while holstering, with the result that the safety lever may become engaged or disengaged, depending on the pistol's design.

Failure to snap the thumb break, thus allowing the male portion of the thumb break strap to move freely against the pistol's safety lever, may also result in the safety lever becoming engaged or disengaged.

The user is urged to exercise caution while wearing, holstering or fastening the thumb break to insure that he or she does not inadvertently change the safety lever from his or her preferred mode of carry. A visual inspection of the position of the safety lever must be made each time after the pistol is securely seated in the holster, the snap is fastened, or the holstered pistol is tucked into the waistband.